

Isolate an RS232 (PC) port to protect against ground loops.

The OPTO-4 provides a safe and low cost way of connecting an NMEA 0183 system to a PC or any other device with a standard RS232 9-pin port.

As a bi-directional NMEA 0183 to RS232 interface cable, the OPTO-4 utilises OPTO-isolation to protect the PC input and spike protection for the PC output, providing comprehensive isolation of PC hardware when connecting to an NMEA 0183 bus.

If isolation in both directions is required, the Actisense USG-2 offers bi-directional isolation in a USB to RS422 (NMEA 0183) form.

The Actisense design integrates an over-moulded case for excellent water resistance and a small footprint for installation into tight spaces.

The OPTO-4 takes power from the host RS232 signals including TX and the handshaking lines RTS and DTR, making the OPTO-4 suitable for most PC serial ports.

In systems that cannot provide power on the handshaking lines, e.g. serial devices with only Rx and Tx lines, a DC power supply can be used.

Note: Connecting an external power supply may create a ground loop between the PC port and the supply. Check that the supply ground is at the same potential as the PC ground before connecting.

Please refer to the Quick Start Guide for detailed wiring instructions, including how to use an external power supply.

Benefits

Protects PC from damage Water resistant cable

Features:

One OPTO-isolated input

One NMEA output

Up to 115200 baud


Port powered

Shielded cable and case

What is OPTO-Isolation?

Ground loops are very easy to create in an NMEA0183 environment without even knowing about it and can wreak havoc with NMEA 0183 devices.

OPTO-isolation (also referred to as optical isolation) is a way of creating a physical barrier to the flow of electrical current to prevent ground loops from happening. Electrical energy is converted to light and transmitted over a small gap where it is converted back to electrical energy using an electronic circuit.

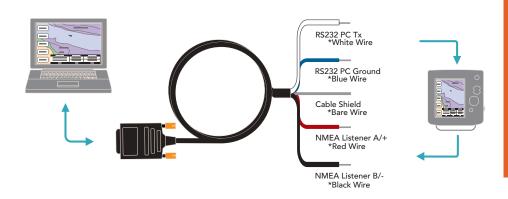

Le spécialiste des équipements électroniques



Zac de la plaine - 1, rue Brindejonc des Moulinais 31500 TOULOUSE Tél: +33 (0)5 67 77 94 44 info@pst-france.fr - www.pst-france.fr

OPTO-4 Specifications



Florenderal		
Electrical		
NMEA Listener / Input Isolation	2kV Opto-Isolation between Red / Black NMEA Input Pair and all other Connections	
NMEA Listener / Input Voltage	+/-15V Continuous Maximum +/-35V Max < 1 Second	
NMEA Listener / Input Signal Thresholds	Logic '0' +2V to +15V, Logic '1'-15V to 0V	
NMEA Talker / Output Voltage & Current	Dependant on Host RS232 Interface. Typically +/-5V to +/-15V @ 10mA Max	
RS232 Voltage on Host	+/-7V to +/-15V	
RS232 Port Total Current Consumption	2mA to 5mA depending on RS232 Voltage	
Speed / Baud Rate	4800 to 115200 Baud	
Mechanical		
Housing Material	PVC Black	
Thumb Screw Material	PVC Orange	
Screw	Steel, Nickel Plated, M2.8 Thread	
DB9 Connector	9 Pin Female	
Cable Length	1.5m	
Cable Wire	22AWG (17/34AWG) Tinned Stranded Copper	
Cable Jacket	PVC	
Shield	Internal Copper Foil Shield	
Cable Outer Diameter	5.5mm	
Approvals and Certifications		
Operating Temperature	-20°C to +70°C	
Electrical Specification	Meets IEC 61162-2	
Weight	100g	
Guarantee	3 Years	
UL Certification	Cable E137250	
RoHS Compliant		

DB9 Pin Out Table

DB9 Pin Number	Function
Pin 1	No Connection
Pin 2	PC Rx / OPTO-4 Tx
Pin 3	PC Tx / OPTO-4 Rx
Pin 4	PC DTR / OPTO-4 Power
Pin 5	GND
Pin 6	No Connection
Pin 7	PC RTS / OPTO-4 Power
Pin 8	No Connection
Pin 9	No Connection

NMEA 0183 Wiring Table

OPTO-4 Wire Colour	Function (connects to)
Red	OPTO-4 Listener Rx A/+ (Talker Tx A/+ or Data)
Black	OPTO-4 Listener Rx B/- (Talker Tx B/- or Ground)
Bare	Shield
White	OPTO-4 Talker Tx A/+ (Listener Rx A/+ or Data)
Blue	OPTO-4 Talker Tx B/- (Listener Rx B/-)

Product Dimensions

